




Chase Doors

World's Leading Manufacturer Of Traffic Doors
Cincinnati Ohio, and Redmond Oregon
Phone Toll Free: 1-800-543-4455
Fax: 1-800-285-0126
www.chasedoors.com

CHASE "CAFE DOORS" WITH POSTS INSTALLATION INSTRUCTIONS

DRAWN BY: J.C. DATE: 06/14/05

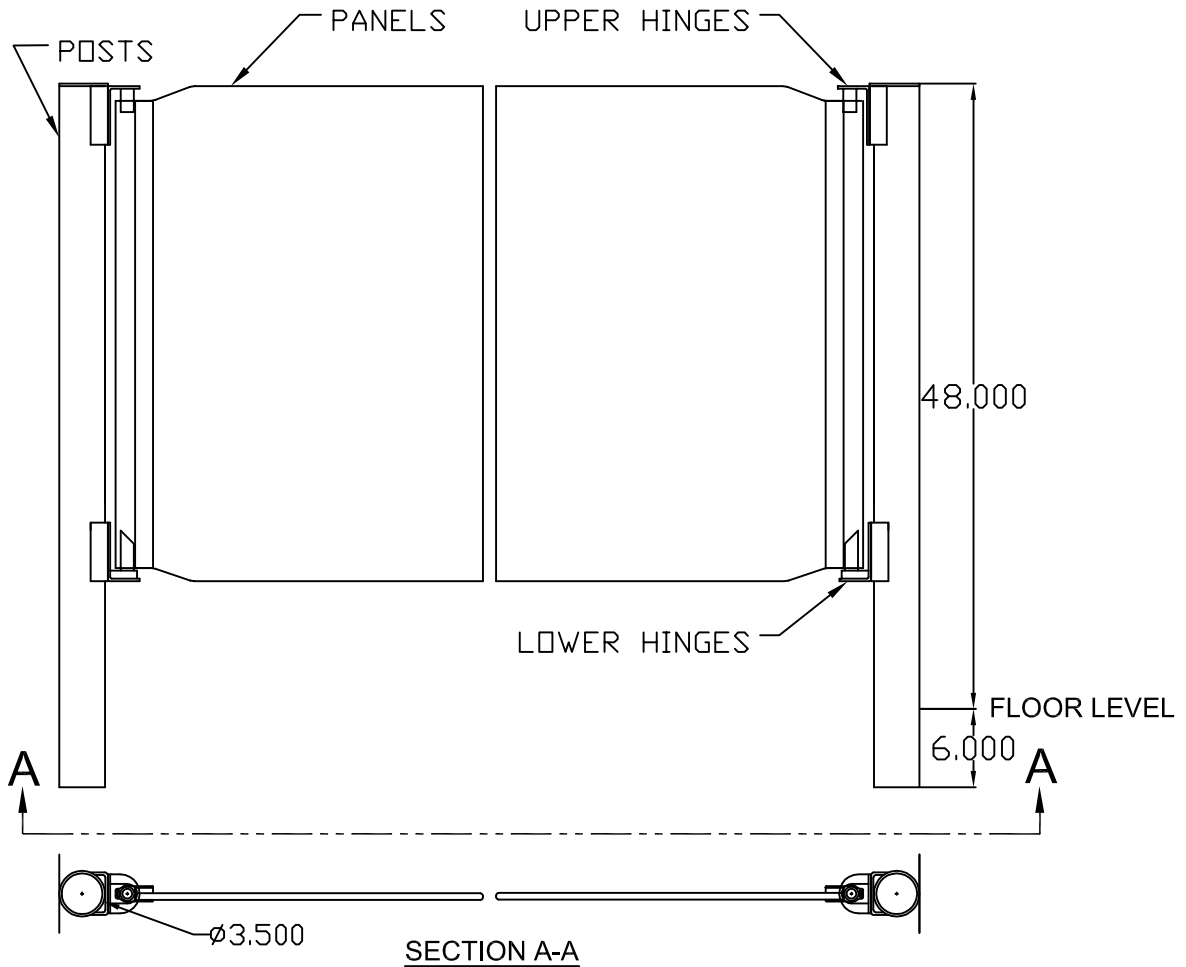

STEP - 1. PREPARATION:

MEASURE WIDTH AND HEIGHT OF FRAMED OPENING AND COMPARE WITH DIMENSIONS GIVEN AT TIME OF ORDERING.

STEP - 2. FOR PROPER INSTALLATION:

WITH APPROXIMATELY 1" GAP BETWEEN PANELS, CORE DRILL FLOOR, AND INSTALL POSTS ASSURING THEY ARE PLUMB AND SQUARE.

STEP - 3. POSTS ADJUSTMENT:

MAKE SURE THAT TOPS OF POSTS ARE 48" FROM FLOOR AND THAT HINGES ARE ALIGNED WITH EACH OTHER.

STEP - 4. PANELS ADJUSTMENT:

- A) LOOSEN THE THREE SET SCREWS AT THE LOWER HINGE WITH PROVIDED ALLEN WRENCH.
- B) ALIGN BOTH PANELS WITH THE CENTER OF THE OPENING.
- C) TIGHTEN THE SET SCREWS TWICE IN SEQUENCE.