


BUMPER TEMPLATE FOR DURULITE STANDARD & INDUSTRIAL DOORS ONLY!

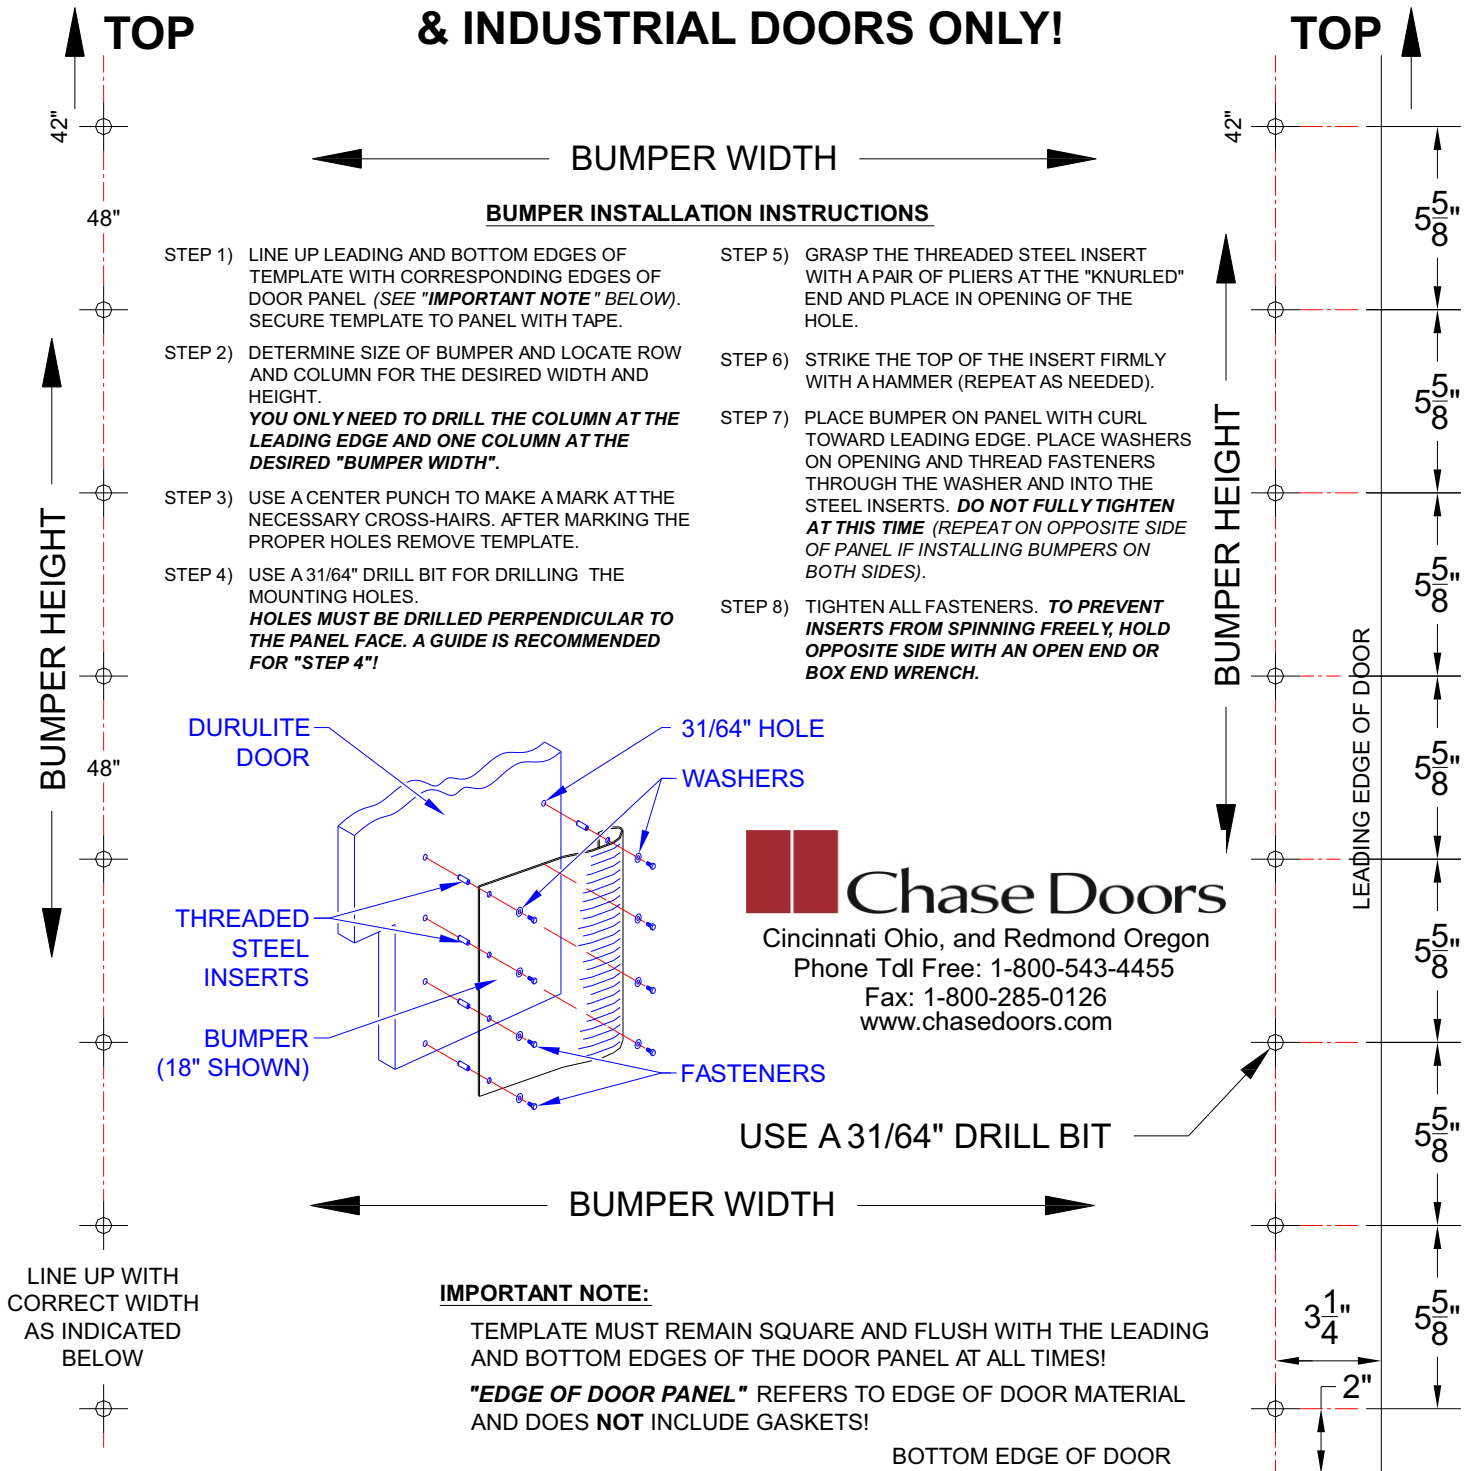

LINE UP WITH CORRECT WIDTH AS INDICATED BELOW

IMPORTANT NOTE:

TEMPLATE MUST REMAIN SQUARE AND FLUSH WITH THE LEADING AND BOTTOM EDGES OF THE DOOR PANEL AT ALL TIMES!
"EDGE OF DOOR PANEL" REFERS TO EDGE OF DOOR MATERIAL AND DOES NOT INCLUDE GASKETS!

BOTTOM EDGE OF DOOR

